

STABLE CAMPER™


Garage Box installation Instructions

These instructions cover both Garage Boxes with
headache rack and without




Installation Kit Bill of Material

Bill of material shown for full kit.

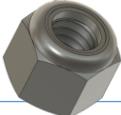
Item	QTY	Description
	6	3/8-16 x 1.25 Hex Bolt
	12	3/8 Flat Washer
	6	3/8-16 Lock Nut

Hardware ASM with Lock Nut

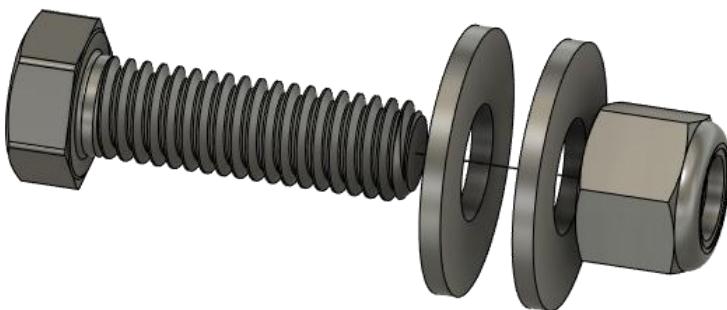



Positioning

Normal position for the Garage Box without headache rack or headache rack delete is centered side to side and flush to front of the bed.

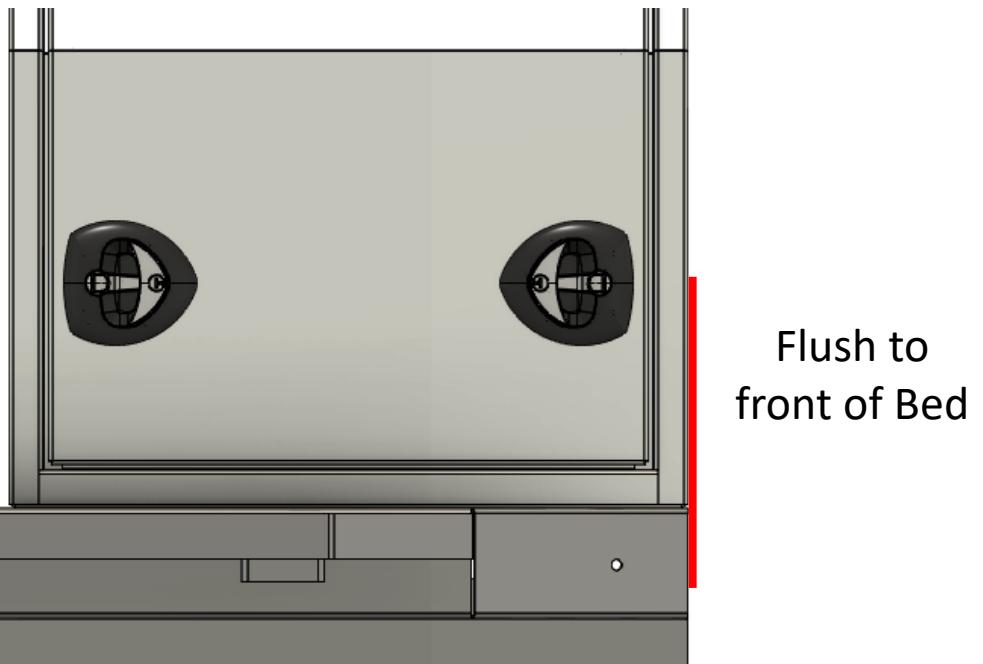

Positioning

Positioning the Garage Box with headache rack gusset clearance is centered side to side on the bed and gapped from the headache rack and gussets such that the headache rack components do not touch the garage box. General rule of thumb is to leave about $\frac{1}{2}$ inch clearance between the Garage box and headache rack. Just enough so that contact is not made in the case of bed and box flexing.

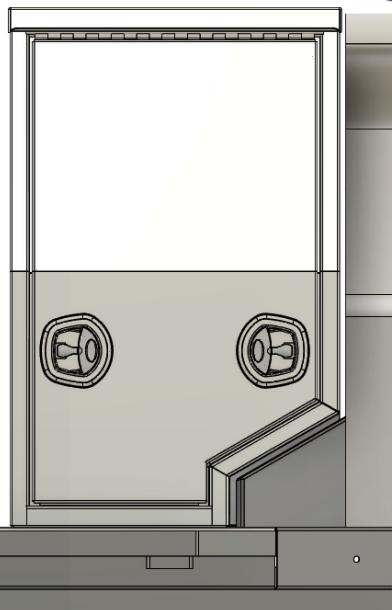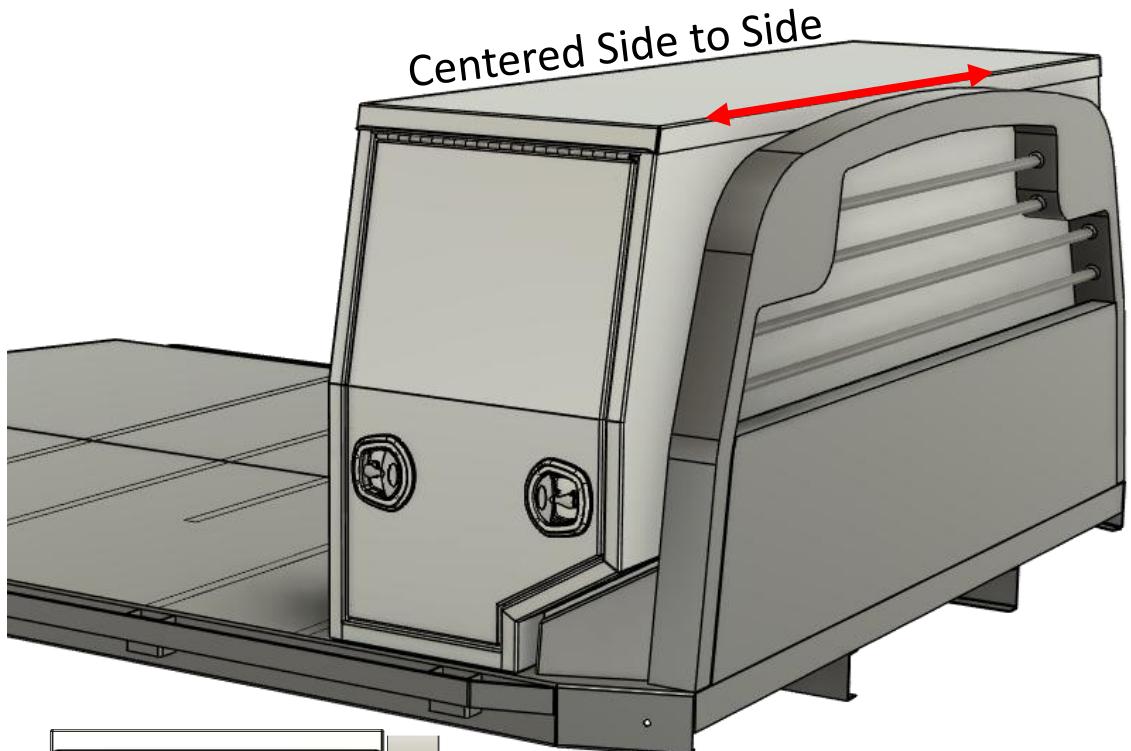


Gapped from
headache rack


*This would be the same for installs with
headache rack and without headache rack
gussets*

Bolting Down

The supplied 6 bolt assemblies are used to fasten the Garage Box to the bed in an arrangement shown below.

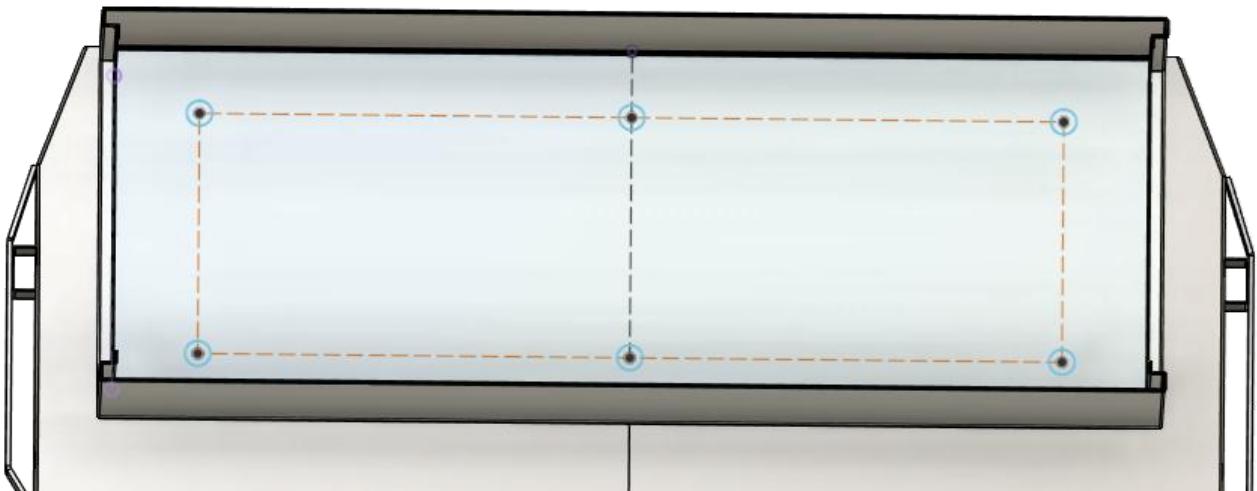


On steel beds, you'll want to ensure that your drill locations are clear from any obstructions such as cross members under the bed.

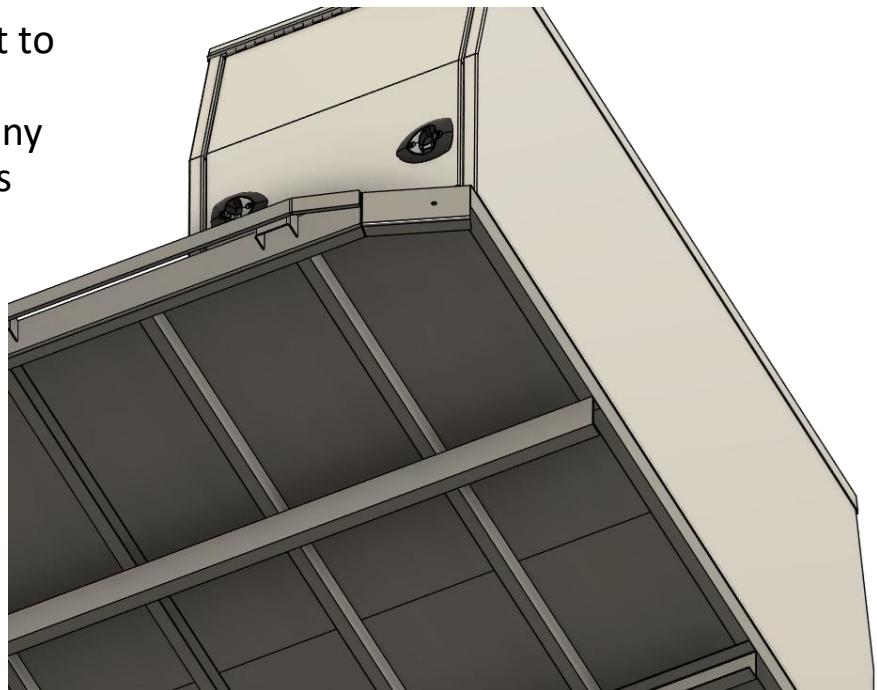

Bolting Down

Aluminum beds have an extruded decking, and you'll want to take care in measuring your drill location to ensure that they land between the webbed sections.

It can be easier to drill from below, especially on aluminum beds.

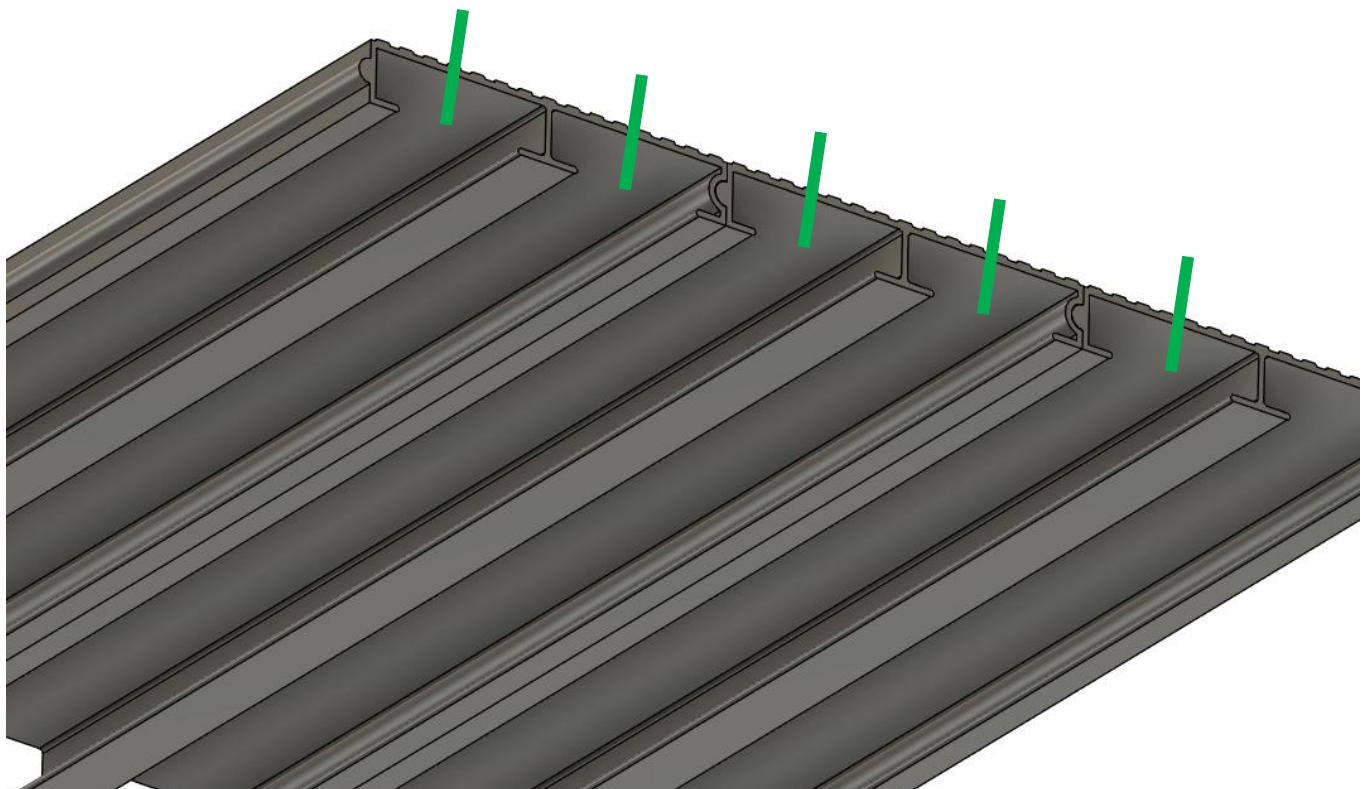

Fasten down the Garage Box with supplied fasteners and the installation is complete.